




Denier Manufacturing


Support / Mounting Bracket 16" – Installation Notes For Mounting Boxes To A Bracket. Cat. # 3P

A product of Denier Manufacturing. 10891 State Route 128 Harrison, Ohio 45030
1-800-286-9601 @ www.roughinready.com



1. Bend the **Far Side Supports** back at 90 Deg.
2. Insert screws from electric box in to **Key Hole Slots** in Universal Bracket.
3. Bend **Tab** down into box. This will lock the box screws into the **Key Slots**.

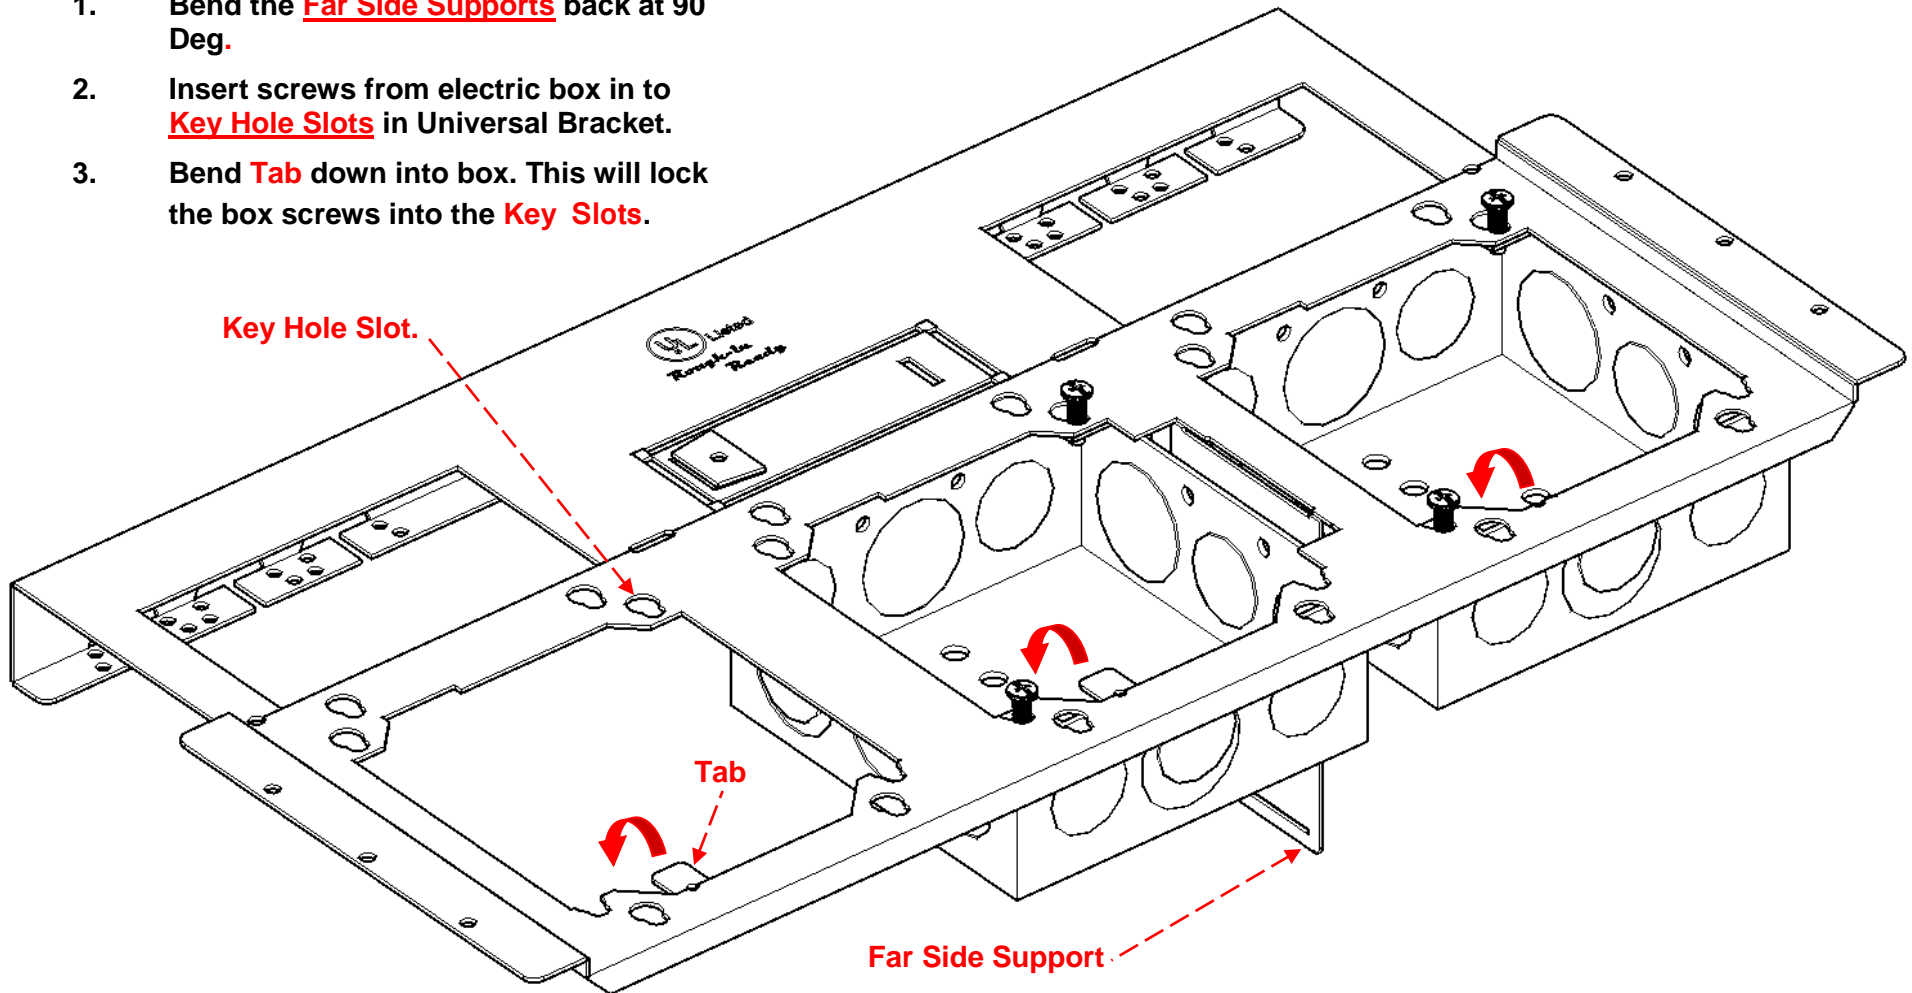

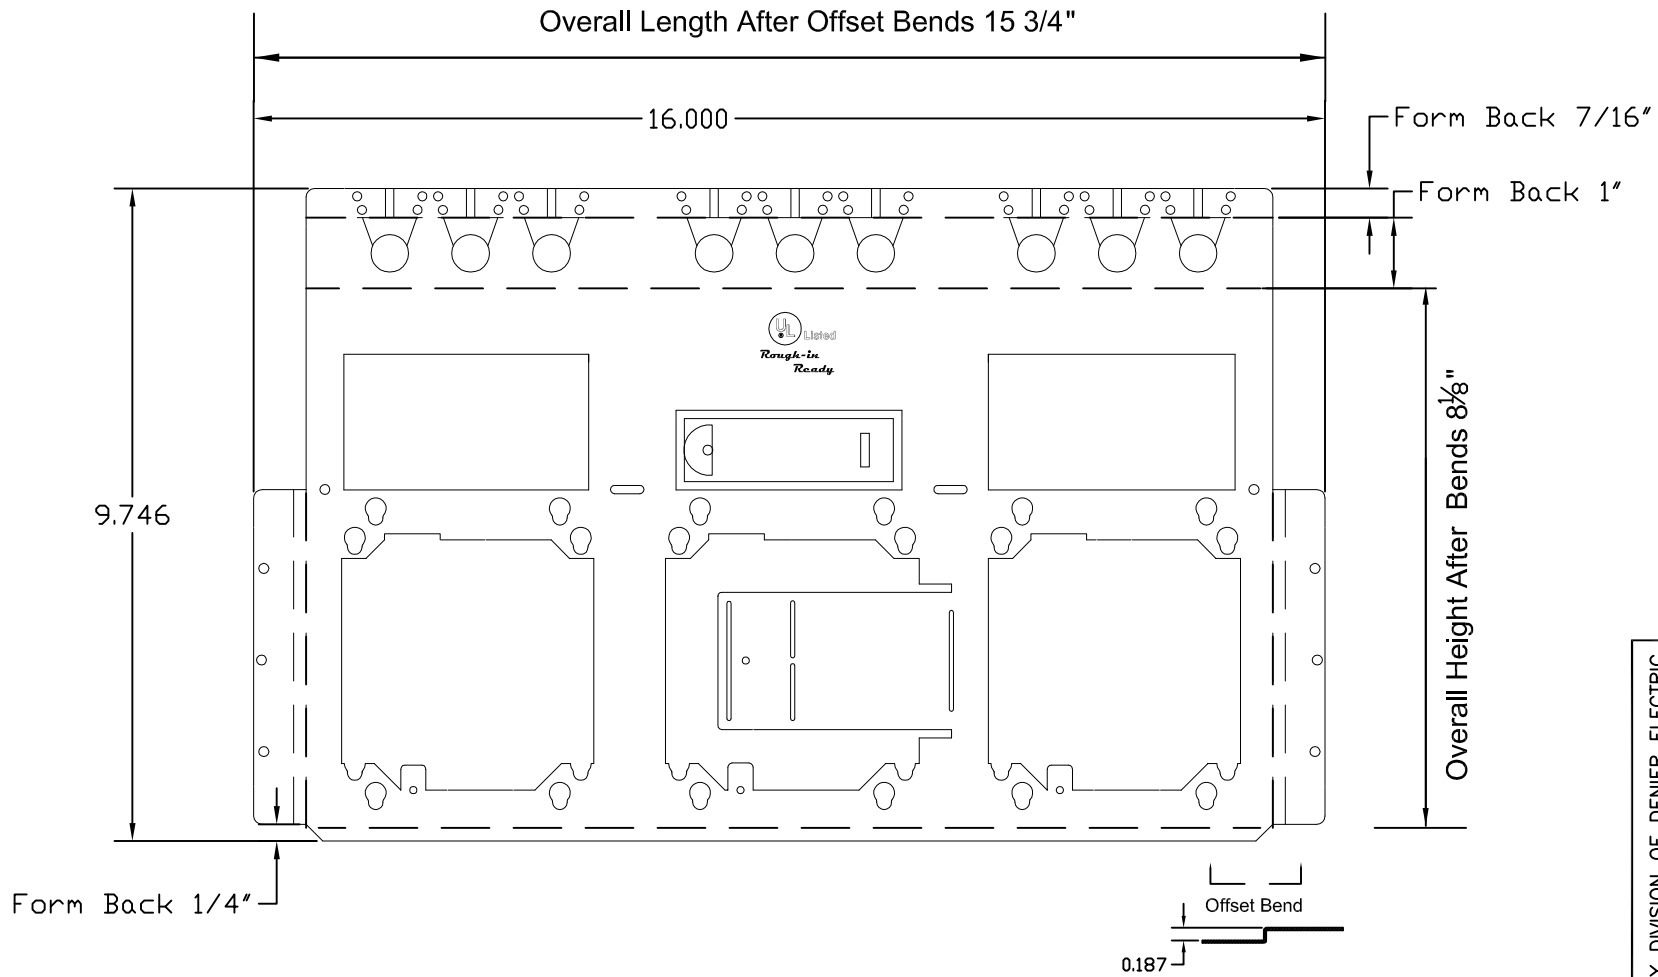

Material 20 Ga. Galv. = .0375
 TOLERANCE UNLESS OTHERWISE SPECIFIED
 XXX Decimal ± .005

© 2015 ROUGH-IN READY DIVISION OF DENIER ELECTRIC CO., INC. THIS DRAWING MAY NOT BE REPRODUCED WITHOUT CONSENT OF DENIER ELECTRIC CO., INC.

Rough-in Ready
 DENIER MANUFACTURING
 11485 Century Circle West
 Cincinnati, OH 45246
 dzachary@roughinready.com
 (513)-738-7537

Scale: None
 Date: 2/16/15
 Drawn By: Don Zachary

Revisions:

Project Title
Support / Mounting Bracket 16"
Catalog Number: 3P

Drawing Number:
 1 Of 1 Sheets

Job Number:

3 Position Mounting Bracket 16" – Installation Notes For

Mounting Duplex and Data with EMT connector. Cat. # 3P

A product of Denier Manufacturing. 10891 State Route 128 Harrison, Ohio 45030

1-800-286-9601 @ www.roughinready.com



Attach The Bracket Directly To Studs:

1. Bend the Far Side Supports at the provided slots for stud depth if needed.
2. For stud depths of 5-1/2" or 6" break out the Far Side Extension (provided). Slide the tab into the slot so that the small holes align. Secure with a small sheet metal screw. Bend at slot for 5-1/2" stud depth.
3. Place against the studs at the desired height and attach the bracket to the studs using the provided holes.
4. When terminating a cable in this box, remove the Plaster Ring Assembly from the mounted Support / Mounting Bracket. The box will remain attached to the bracket.
5. To install the AC-MC Cable Whip remove the KO and snap the connector into the box.
6. Adjust the Cable Holder to the desired angle to install the AC-MC cable per National Electrical Code section 300.4(D). To attach the AC-MC cable, push the cable into the holder until it snaps in.
7. Terminate the appropriate conductors to the device with Wagos (provided) and reattach the Plaster Ring Assembly to the mounted Support Bracket.

